

ROLLER JIB HEAD

- For attachment to mast or jib adapters
- Will work with all material handlers
- Will handle up to 1/2" rope
- Load Limit 750 lbs.

CAT NO	DESCRIPTION	LBS
21644	ROLLER JIB HEAD	7.1

**21644****SELF ALIGNING CONDUCTOR HOLDER**

- For attachment to mast or jib adapters
- Opening is 1 1/2"
- Spring loaded latch is hot stick operable
- Load limit 300 lbs.

CAT NO	DESCRIPTION	LBS
21642	SELF ALIGNING CONDUCTOR HOLDER	4.5

**21642****12666****SUPER DUTY CONDUCTOR HOLDER**

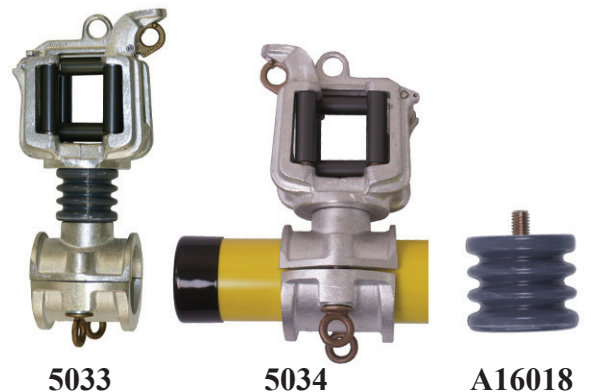
- For attachment to mast or jib adapters
- Accepts 2" diameter conductors
- Load limit 500 lbs.

CAT NO	DESCRIPTION	LBS
12666	SUPER DUTY CONDUCTOR HOLDER	11.0

FOUR WAY CONDUCTOR HOLDER

- For mounting to 3" O.D. arm
- Opening is 1 1/2"
- Spring loaded latch is hot stick operable
- Load limit 300 lbs.

CAT NO	DESCRIPTION	LBS
5033	FOUR WAY CONDUCTOR HOLDER WITH INSULATOR	5.0
5034	FOUR WAY CONDUCTOR HOLDER ONLY	4.0
A16018	EPOXY INSULATOR FOR ATTACHMENT TO 5034 CONDUCTOR HOLDER - USE OF INSULATOR ALLOWS LIFT ARM TO BE USED ON 34.5KV	1.0

**5033****5034****A16018****BRACE POLE**

- For attachment to arm assembly and mast
- 57" x 1 1/2" O.D.

CAT NO	DESCRIPTION	LBS
12006	BRACE POLE	3.2

**12006**