

TELESCOPIC SHOTGUN STICK - REPAIR PARTS LIST

△ 2 3



△ 4 5 6 7 8 9 10

△ 11 12 13 14 15 (INCLUDES FIBERGLASS BASE SECTION)

△ 16 17 (INCLUDES FIBERGLASS TIP SECTION WITH HEAD ASSEMBLED TO POLE)

△ 18 19 20 21

24 25—P10011, P16518 (- U MODELS ONLY)

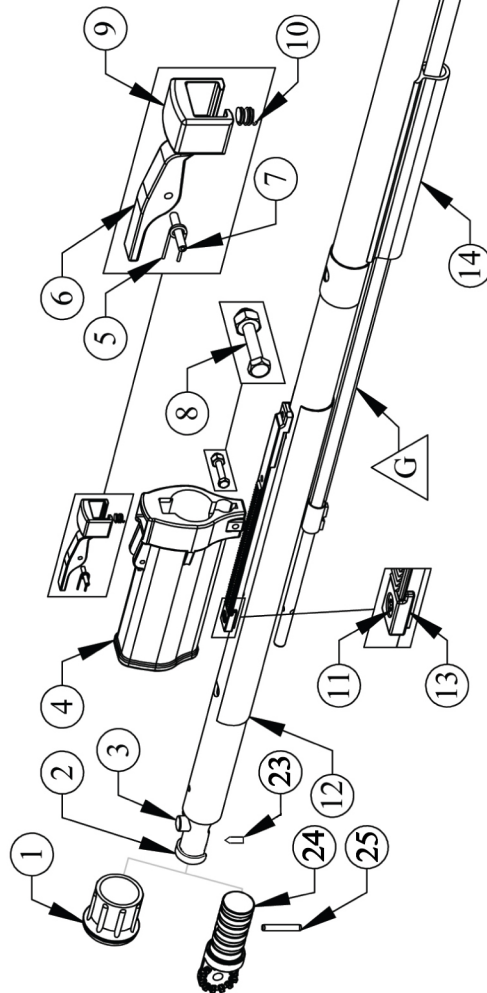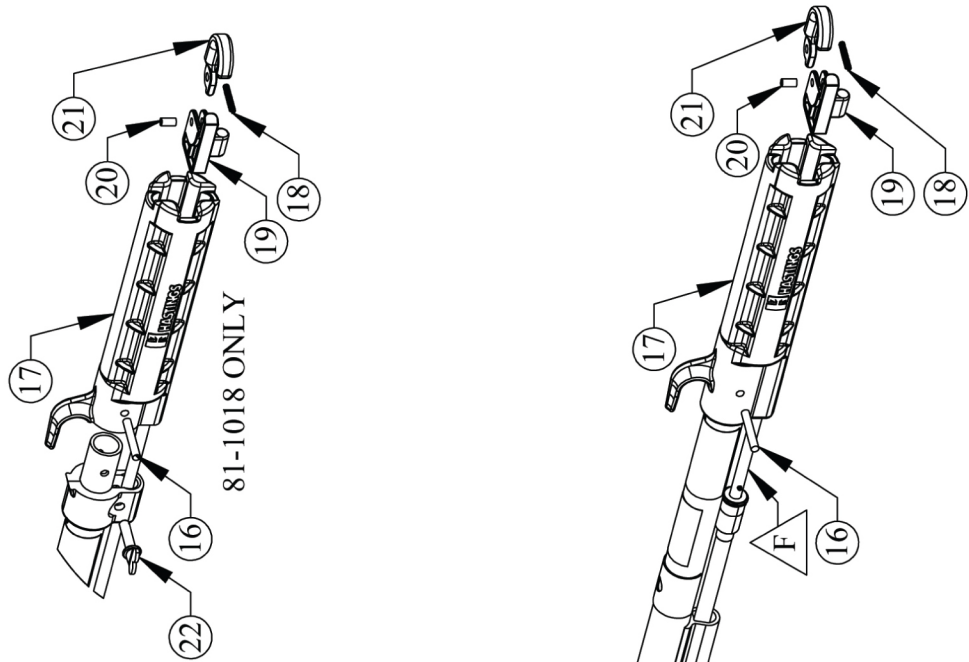

△—COMPLETE ASSEMBLIES

○—COMPONENT PARTS