

EXTENSION CROSSARM PARTS LIST
Models: 5000, 5001, 5006, 5007, 5036, 5037, 5016, 5016-1

COMPONENTS PARTS LIST			
NO	DESCRIPTION	CAT NO	QTY
1	7/16-14 HEX HEAD MACHINE BOLT	P16067	1
2	CROSSARM LOOP - SMALL	P30025	1
3	1/2-13 HEX HEAD MACHINE BOLT	P16063	1
4	1/2-13 SELF LOCKING NUT	P16224	1
5	CROSSARM LOOP MOUNTING BRACKET	P10022	1
6	5' SUPPORT POLE ASSEMBLY - 5000, 5001	A20033	1
7	6' SUPPORT POLE ASSEMBLY - 5006, 5007	A20034	1
8	7/16-14 STUD	P16068	1
9	INSULATOR ASSEMBLY	A30008	1
10	1/2" FLAT WASHER	P16414	2
11	7/16" FLAT WASHER	1-07819	1
12	SADDLE CLAMP EYE BOLT	P10024	2
13	CROSSARM LOOP - LARGE	P30027	1
14	1/2-13 HEX HEAD MACHINE BOLT	P16061	1
15	CROSSARM LOOP SPACER	P30028	2
16	5' SUPPORT POLE ASSEMBLY - 5036, 5037	A20177	1
17	6' SUPPORT POLE ASSEMBLY - 5016, 5016-1	A20060	1
18	CONDUCTOR LOCK	P10017	1
19	END CAP	P10457	1
20	SELF TAP SCREW	P16133	1
21	CONDUCTOR HOLDER ASSEMBLY	A10070	1
22	RIVET	P16323	1

CROSSARM REPLACEMENT ASSEMBLIES			
NO	DESCRIPTION	CAT NO	QTY
A	CONDUCTOR HOLDER & MOUNTING BRACKET ASSEMBLY	A10001	1
B	CONDUCTOR HOLDER ASSEMBLY WITH INSULATOR	A10002	1
C	CONDUCTOR HOLDER ASSEMBLY WITH MOUNTING BOLT & WASHER	A10003	1
D	MOUNTING BRACKET ASSEMBLY	A10004	1
E	CROSSARM LOOP & MOUNTING BRACKET ASSEMBLY - SMALL	A10006	1
F	CROSSARM LOOP & MOUNTING BRACKET ASSEMBLY - LARGE	A10007	1